

Step 1.

Place U-bracket on lift arm with countersunk hole at the bottom of the lift arm.

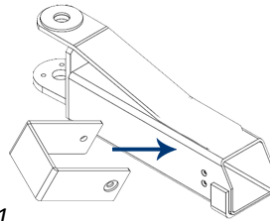


Fig. 1

Step 2.

Insert the 7/16" X 4.5" Bolt + 7/16" Flat washer up through the bottom of the bracket.

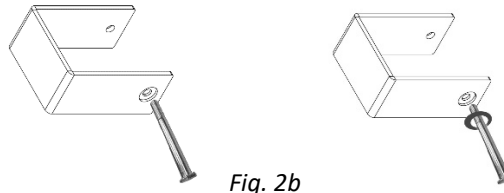


Fig. 2a

Fig. 2b

NOTE: SOME LIFTS WILL REQUIRE WASHER AS SHOWN IN Fig. 2b

Step 3.

Slide bolt up through washer and bottom of bracket, washer, 1/2" Delrin bushing, washer, the Arm Assembly, washer, and a second 1/2" Delrin bushing.



Fig. 3

Step 4.

Slide bolt through the top of the U-Bracket. Cap the bolt with a 7/16" flat washer and 7/16" nyloc nut. (Fig. 3)

Step 5.

Using a 5/8 wrench and impact, tighten the bolt and nyloc nut until bolt has crested the nyloc nut and the U-Bracket does NOT slide on the lift arm.



Step 6.

Using a 9/16 wrench and ratchet, tighten the hinge assembly. Arm should be able to raise and lower with slight resistance.

